


Greyter Water Ready: Rough-In Only

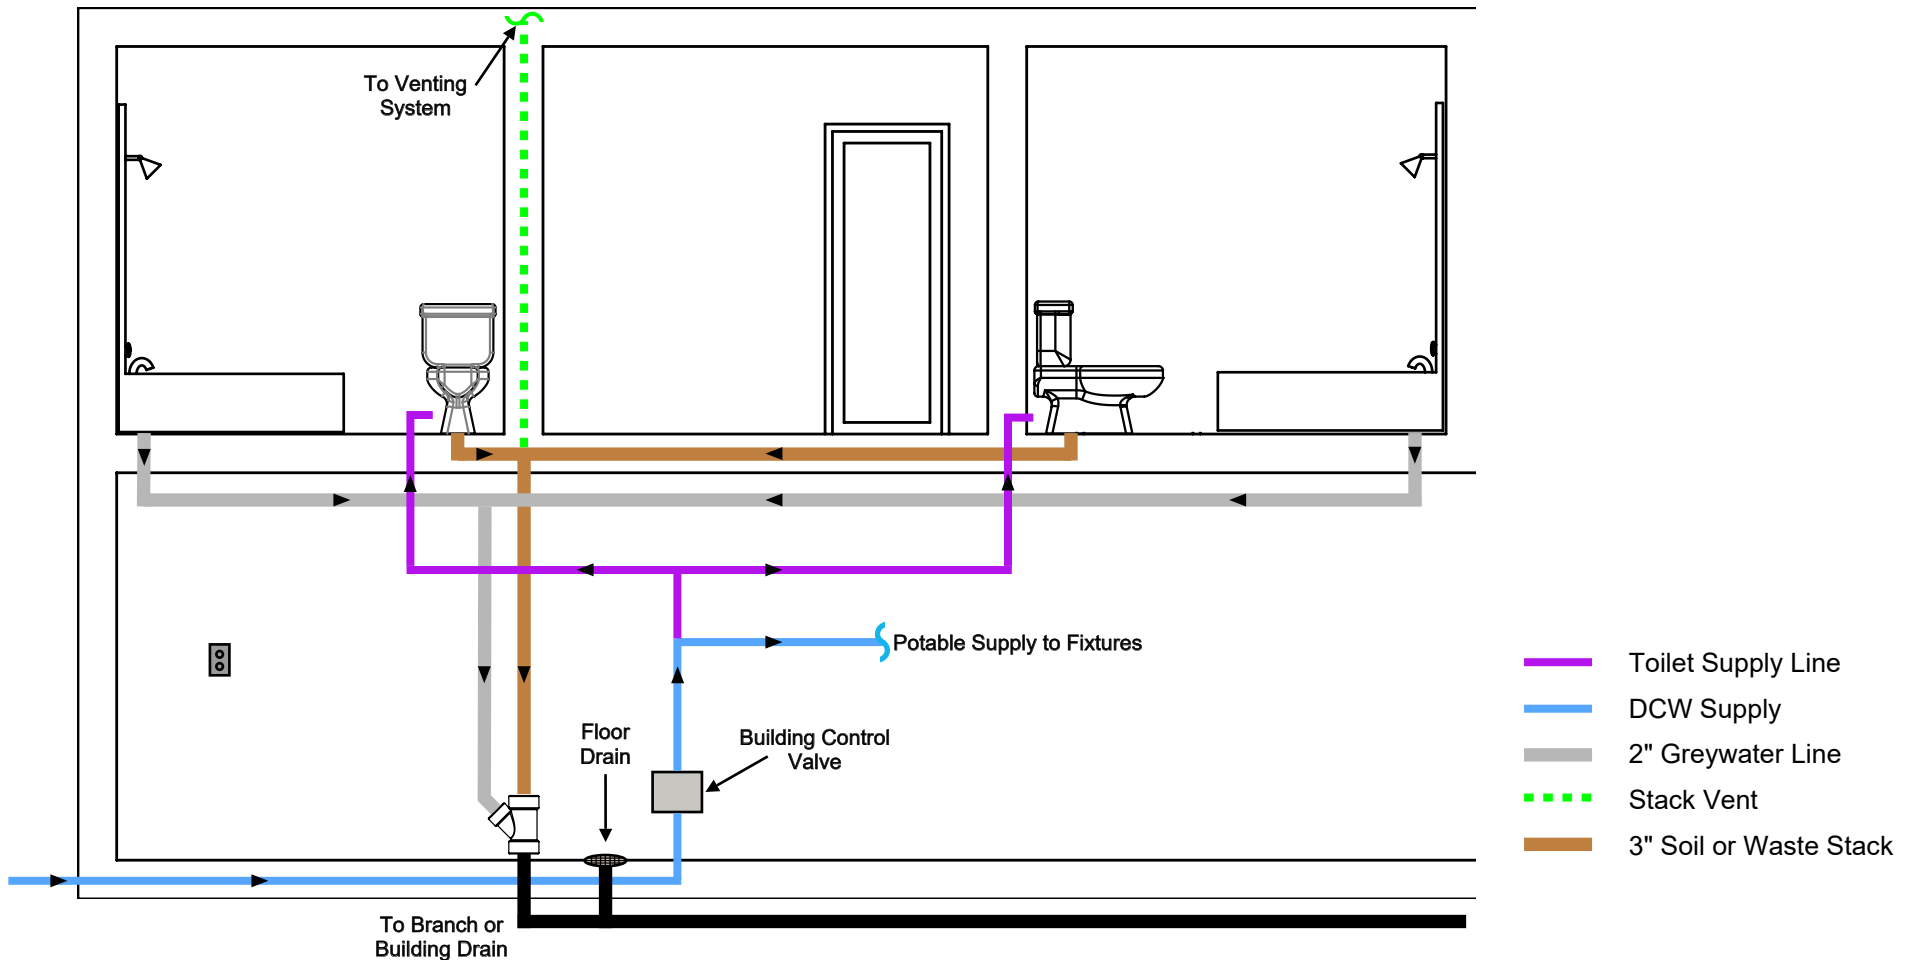

1. Isolate greywater - Minimum 2 showers (2")
2. Homerun greywater to mechanical room or where future Greyter HOME will be installed
3. If overflow is tying into a 3" soil or waste stack, connection is a 3" x 4" cleanout with 2" side fitting. If tying into a 2" soil or waste stack, connection is a 2" x 2" cleanout with 2" side fitting. Fitting to be tight to the slab.
4. Isolate supply lines to toilets (purple pipe or use marking tape with non potable writing)
5. Provide access to future vent (1.5" or 2")
6. Provide single gang 15 Amp (dedicated), 120V. Plug should be 60" above finished floor within 12" of unit
7. Provide floor drain within 24" of potential Greyter HOME location