


Greyter Water Ready: Rough-In Only

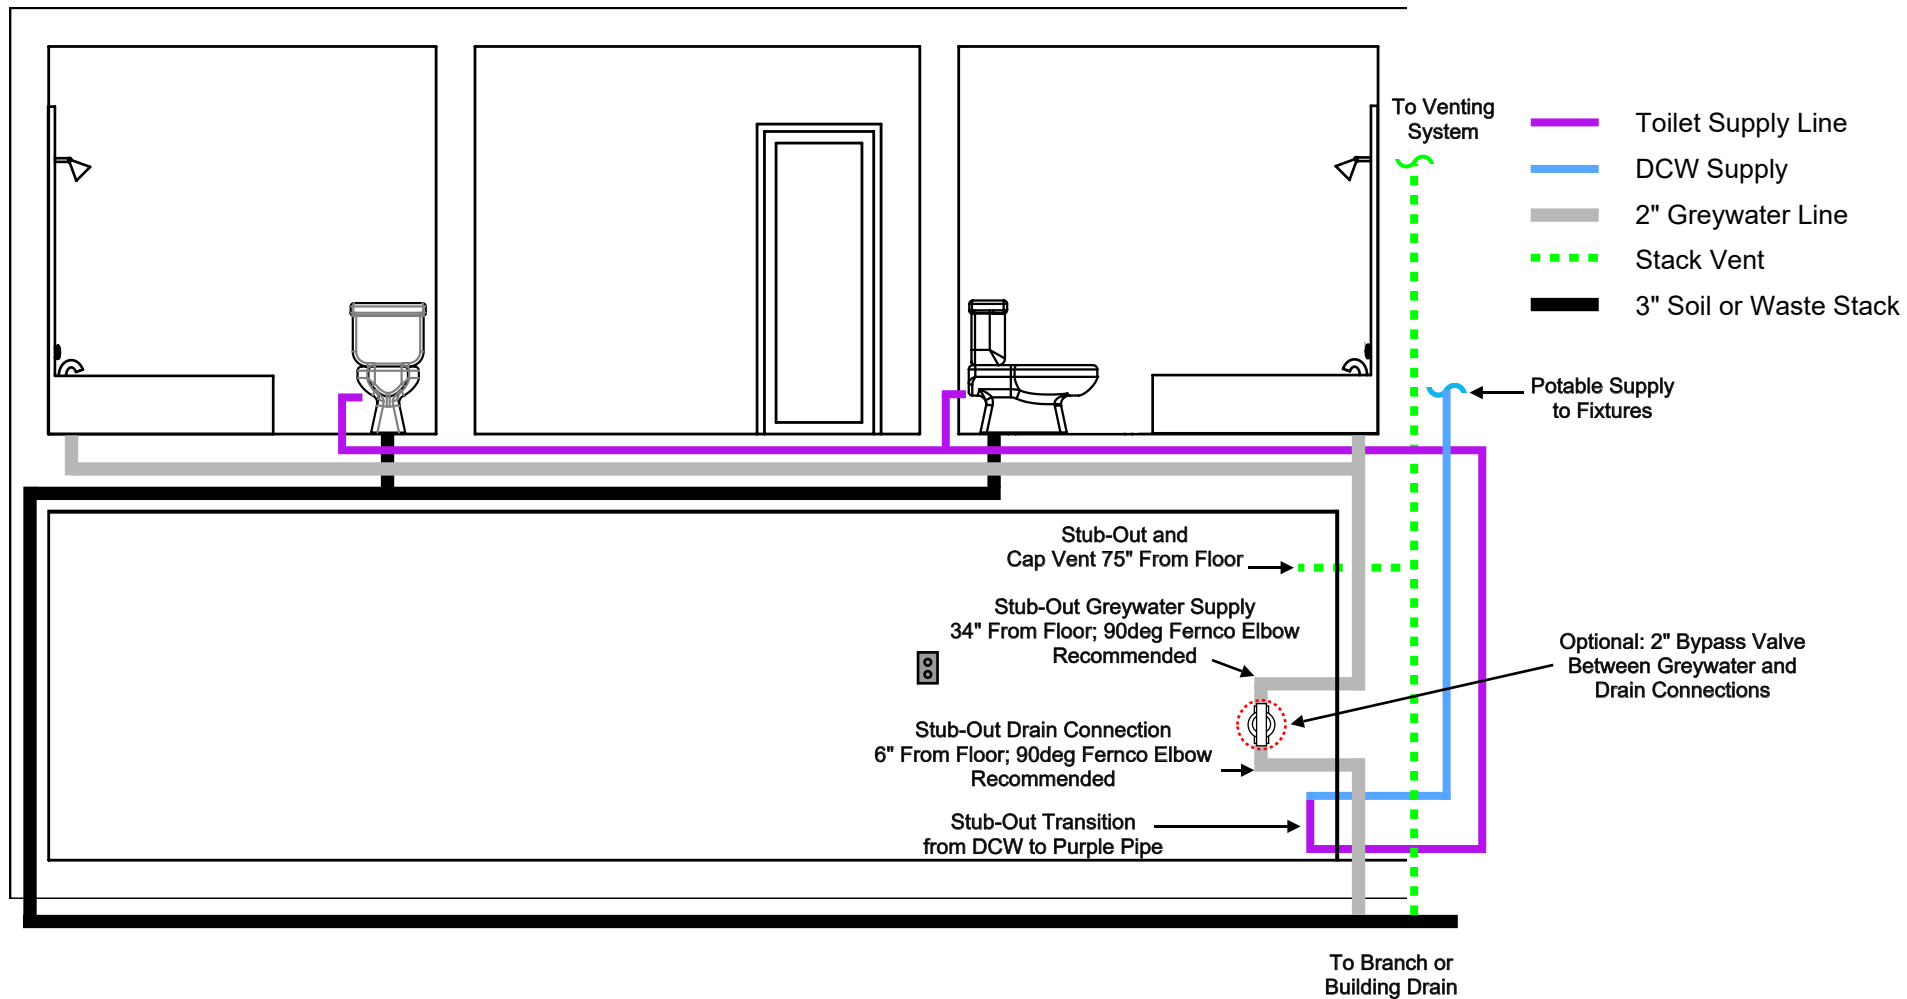

1. Isolate greywater - Minimum 2 showers (2")
2. Homerun greywater to mechanical room or where future Greyter HOME will be installed
3. Isolate supply lines to toilets (purple pipe or use marking tape with non potable writing)
4. Provide access to future vent (1.5" or 2")
5. Provide single gang 15 Amp (dedicated), 120V. Plug should be 60" above finished floor within 12" of unit